


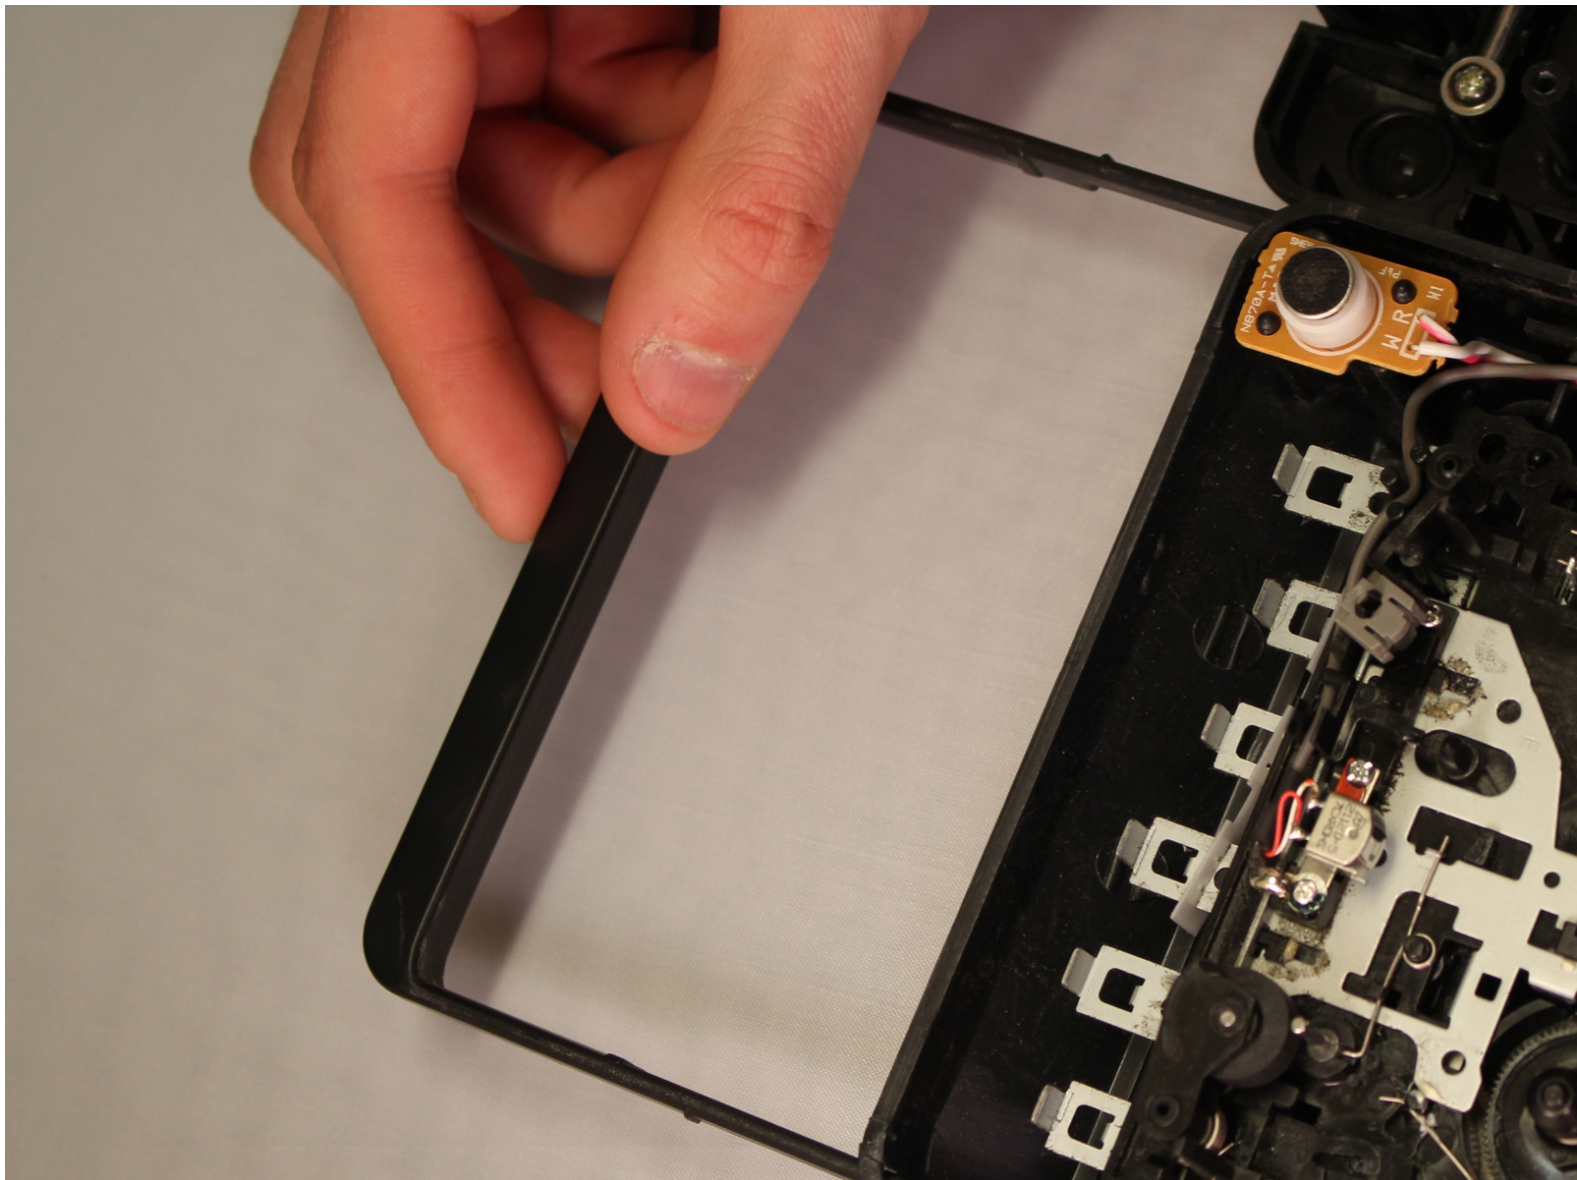

# Panasonic RQ-2102 Holding Handle Replacement

This guide shows one how to replace/fix the handle on the Panasonic RQ-2102 Cassette Recorder.

Written By: Andrew Campbell



## INTRODUCTION

In this guide, you will learn how to replace the holding handle on this device. It is a thin plastic piece, and the likelihood of it breaking after being used and abused is high. It is an easy fix if it is the actual handle that is broken. If the problem is the catches that hold the handle in place, however, it is impossible to fix without replacing the entire body of the device.


---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-



## Step 1 — Holding Handle

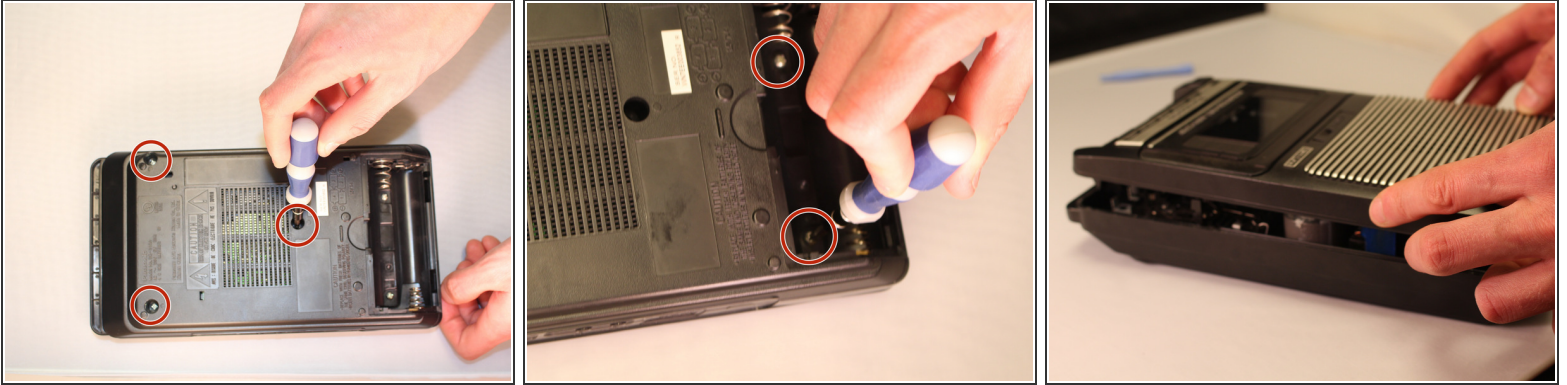

- Remove the three screws from the back of the device body
- Remove both screws from inside the battery compartment
- Remove the back of the device body
- [All screws are the same size]
- [Be cautious when pulling apart device as both sides are connected by a cord that could be damaged if care is not taken]



## Step 2

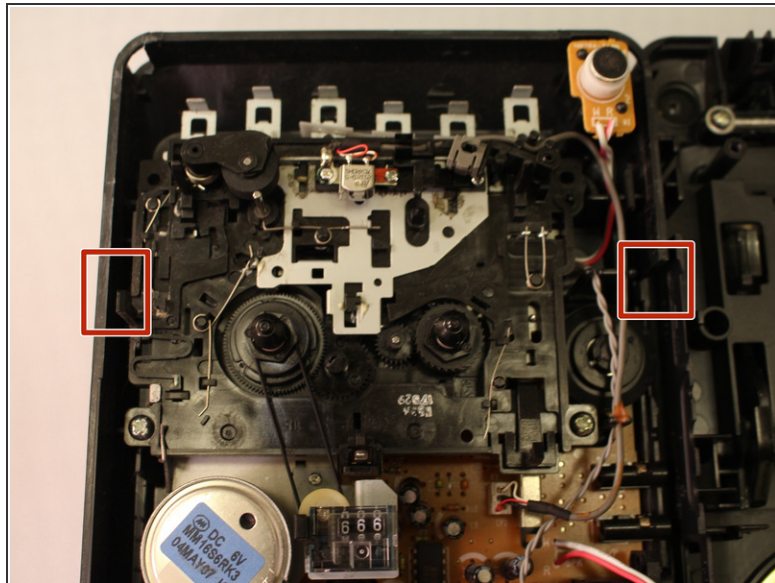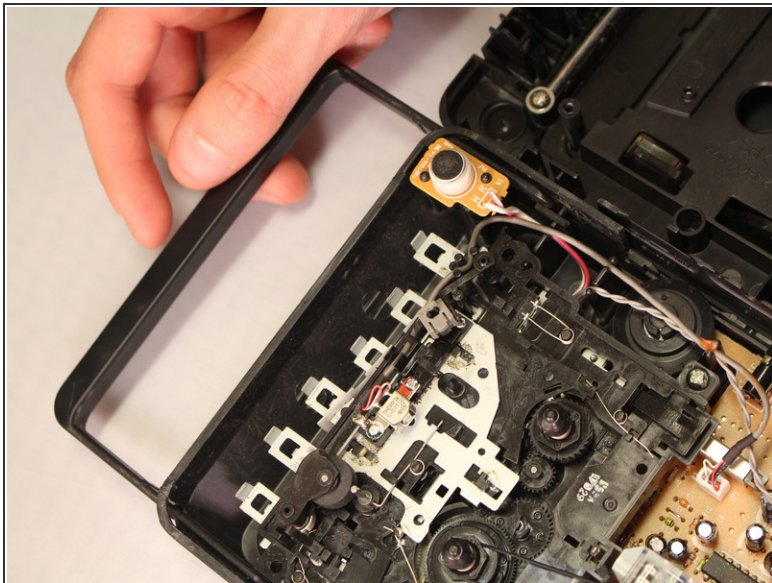

- Remove the handle
  - Make sure the handle slots are not broken
  - Replace the old handle with the new one
- ☛ If handle slot is broken, you may need a new device (it is part of the molded plastic body)]

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 03:01:32 AM.